

# INSTALLATION AND MAINTENANCE MANUAL LM CHAIN HOIST

## LOADMATE<sup>®</sup> LM1

English

STD-R-KHA-F-CQD-ENG



---

**THIS PAGE INTENTIONALLY LEFT BLANK**



**CAUTION:** Read the instructions supplied with the product before installation and commissioning.



**CAUTION:** Keep the instructions in a safe place for future reference.

## Table of contents

<b>1</b>	<b>INTRODUCTION</b> .....	<b>5</b>
1.1	Contact Information .....	5
1.2	Warranty .....	5
1.3	Disclaimer .....	5
1.4	Safety.....	6
1.5	Placards and Instructions .....	8
<b>2</b>	<b>INSTALLATION</b> .....	<b>9</b>
2.1	General .....	9
2.2	Lubrication .....	9
2.3	Mounting .....	10
2.4	Load Hook Throat Opening .....	10
2.5	Electrical Connection.....	11
2.6	Three Phase Power Connections.....	12
2.7	Single Phase Power Connections .....	13
<b>3</b>	<b>INITIAL START-UP</b> .....	<b>14</b>
3.1	General .....	14
3.2	Correcting the Direction of Hook Travel .....	14
3.3	Operational Checks – No Load .....	15
3.4	Operational Checks – With Load .....	15
<b>4</b>	<b>HOIST OPERATION</b> .....	<b>16</b>
<b>5</b>	<b>MAINTENANCE</b> .....	<b>18</b>
5.1	Basic Hoist Construction .....	18
5.2	Motor / Body .....	18
5.3	Hoist Motor Brake and Load-Limiting Device .....	19
5.3.1	Slip Clutch Operation (See <i>Figure 5.2</i> ).....	19
5.3.2	Slip Clutch Adjustment after Installation .....	21
5.3.3	Hoist Motor Brake Adjustment (See <i>Figure 5.2</i> ).....	22
5.3.4	Replacement Criteria for Motor Brakes .....	23
5.4	Load Chain .....	24
5.4.1	General .....	24
5.4.2	Maintenance Inspection .....	24
5.4.3	Load Chain Specifications (see <i>Figure 5.3</i> ).....	26
5.4.4	Removing the Load Chain .....	26
5.4.5	Installing the Load Chain .....	27
5.5	Fall Stop Assembly .....	29
5.5.1	General .....	29
5.5.2	Fall Stop Installation.....	29
5.6	Chain Container.....	30
5.7	Limit Switches.....	31
5.7.1	Upper and Lower Travel Safety Limit Switch.....	31
5.7.2	Upper and Lower Rotary Travel Limit Switch (Optional Only on 3-Phase units).....	32
5.8	Hooks.....	33
5.8.1	General .....	33
5.8.2	Inspection.....	34
5.8.3	Hook Dimensions and Specifications .....	34
5.8.4	Top Hook.....	35
5.9	Controls .....	36
5.9.1	General .....	36

5.9.2	Control Fuses.....	36
5.10	Control Panel Layout – Three Phase – Two Speed.....	37
5.11	Control Panel Layout – Single Phase – Single Speed – 115 Volt .....	38
5.12	Wiring Diagrams.....	39
5.12.1	Wiring Diagram – Three Phase – Two-speed Hoist .....	39
5.12.2	Wiring Diagram – Single Phase – Connections and Components .....	40
5.12.3	Wiring Diagram – Single Phase – Power Circuit .....	41
5.12.4	Wiring Diagram – Single Phase – Control Circuit.....	42
5.12.5	Wiring Diagram – 3 Button – Push Button .....	43
5.12.6	Wiring Diagram – 5 Button – Push Button .....	44
5.12.7	Wiring Diagram – 7 Button – Push Button .....	46
<b>6</b>	<b>PREVENTATIVE MAINTENANCE .....</b>	<b>47</b>
6.1	Maintenance and Inspection Table.....	47
6.2	Lubrication .....	48
6.3	Recommended Technical Support for Various Spare Parts .....	49
6.4	Screw Tightening Torque (lb-ft) Specifications.....	49
6.5	Troubleshooting .....	50
<b>7</b>	<b>PARTS ILLUSTRATION.....</b>	<b>52</b>
7.1	Hoist Body .....	52
7.2	Helical Gear Mechanism & Brake.....	54
7.3	Lifting Assembly.....	56
7.4	Control Panel Assembly – 3 Phase Power Supply.....	58
7.5	Control Panel Assembly – 115 Volt 1-Phase Power Supply .....	59
7.6	Gear Limit Switch (OPTION) .....	60
7.7	Push Button Assembly – Horizontal Pairs of Buttons.....	61
7.8	Push Button Assembly – Horizontal Pairs of Buttons.....	62
7.9	Push Button Assembly – Vertical Pairs of Buttons (Option).....	63
7.10	Push Button Assembly – Vertical Buttons (Option).....	65