

OPERATOR'S MANUAL ELECTRIC CHAIN HOIST

LOADMATE[®] LM1-LM05-LM10-LM16/20/25

English

STD-R-KHA-F-CQD-ENG





THIS PAGE INTENTIONALLY LEFT BLANK

 **CAUTION:** Read the instructions supplied with the product before installation and commissioning.


 **CAUTION:** Keep the instructions in a safe place for future reference.

Table of contents

1 INTRODUCTION..... 3

1.1 Contact Information..... 3

1.2 Disclaimer of Warranty..... 3

1.3 Disclaimer of Liability 3

1.4 Indemnity 4

2 SCOPE AND PURPOSE 5

2.1 Scope..... 5

2.2 Purpose..... 5

2.3 Installation and Maintenance Manual 5

3 SAFETY 6

3.1 Training Requirements 6

3.2 Introduction to Safety 7

3.3 Owner / User / Operator Responsibilities 8

3.4 Recommended Operator Qualifications..... 10

4 ELECTRIC CHAIN HOIST CONSTRUCTION..... 11

4.1 General Hoist Construction..... 11

4.2 Lifting Medium..... 11

4.3 Power for Operation..... 11

4.4 Suspension Types 12

4.5 Directional Travel of Overhead Hoists 14

4.6 Principal Parts of an Electric Chain Hoist 16

5 SAFE OPERATING PRACTICES 24

5.1 Before Each Shift or The First Time the Hoist is Used Each Shift 25

5.2 Before Operating A Hoist and Applying a Load..... 28

5.3 Moving the Load 30

5.4 Parking the Load..... 31

5.5 Hoist Limit Devices 32

5.6 General Recommendations 32

5.7 Recommended General Do Not’s..... 33

5.8 Operator Hand Signals 34

6 APPENDIX – A – DEFINITIONS OF ELECTRIC CHAIN HOIST TERMS 35

7 APPENDIX – B – REFERENCES 38

8 APPENDIX – C – RECOMMENDED PRACTICES – ELECTRIC POWERED HOISTS..... 40