

English  
7.9.2007



## SERVICE MANUAL FOR HOIST

-  
-  
-  
-  
-

DOCTNI16-0.ORD





R&M Materials Handling, Inc.  
 4501 Gateway Boulevard  
 Springfield, Ohio 45502  
 P.: (937) 328-5100  
 FAX: (937) 325-5319



**Read the instructions supplied with the product before installation and commissioning.**



Keep the instructions in a safe place for future reference.

Table of content

<b>1 Major update history (only in English) .....</b>	<b>5</b>	5.9.1 Service .....	32
<b>2 Introduction .....</b>	<b>7</b>	5.10 Second brake .....	34
2.1 Instructions .....	7	5.11 Manual brake release for hoisting motor (for brake type NM387**)	35
2.2 Symbols .....	7	5.11.1 Assembling the manual brake release .....	35
<b>3 Safe operation .....</b>	<b>8</b>	5.11.2 Brake release usage instructions.....	36
3.1 Intended use of the hoist and ambient conditions .....	8	5.12 Manual crank.....	36
3.2 Sound intensity level.....	8	5.12.1 Assembling the manual crank.....	37
3.3 Service classification of hoist.....	8	5.12.2 Operating the manual crank .....	37
3.3.1 Load spectrum .....	8	5.12.3 Before normal operation of the hoist.....	37
3.3.2 Average daily operating time .....	8	5.12.4 Assembly .....	37
3.3.3 Determining the operating group of the hoist ..	9	5.13 Hoisting limit switch Drum size $\phi$ 243 mm	38
3.4 Safe working principles.....	9	5.13.1 Service .....	38
3.5 Using the pushbutton controller .....	9	5.14 Hoisting limit switch (new, white) .....	39
3.5.1 Using the pushbuttons (two steps, contactor control) 11		5.14.1 Service .....	39
3.5.2 Using the pushbuttons (EP-mode, optionally used with Inverter controls) .....	11	5.14.2 Assembly .....	40
3.5.3 Using the pushbuttons (two speeds, controlled by Inverter).....	12	5.14.3 Adjustment.....	41
<b>4 Hoist manufacturer .....</b>	<b>13</b>	5.14.4 Fine adjustment .....	42
4.1 Hoist identification data.....	13	5.15 Hoisting limit switch (old, black) .....	43
4.2 Directives and standards .....	13	5.15.1 Service .....	43
4.3 Manufacturer's contact details (R&M).....	13	5.15.2 Assembly .....	44
4.3.1 Spare parts .....	14	5.15.3 Adjustment.....	45
<b>5 Construction .....</b>	<b>15</b>	5.16 Hook operated upper limit switch ( $\phi$ 243 mm) 47	
5.1 Low Headroom Trolley Hoist .....	15	5.16.1 Service.....	48
5.2 Double-girder Trolley Hoist.....	17	5.17 Hook operated control limit switch ( $\phi$ 303, 355, 406, 608 mm) .....	48
5.3 Normal Headroom Trolley Hoist .....	20	5.18 Pushbutton controller .....	48
5.4 Fixed Hoist.....	21	5.18.1 Service .....	49
5.5 Machinery Hoist.....	24	5.19 Travelling machinery .....	50
5.6 Trolley buffers .....	25	5.19.1 Service .....	52
5.6.1 Service .....	25	5.20 MF06 Travelling motor with Compact- / DC- brake53	
5.7 Hoisting machinery .....	25	5.20.1 Adjustment of Compact-brake air gap .....	53
5.7.1 Service .....	25	5.20.2 Removing the Compact-brake .....	53
5.7.2 Assembly .....	25	5.20.3 Removing DC-brake and inspection of brake friction disc.....	54
5.8 Hoisting gearbox.....	30	5.20.4 Dismounting the travelling motor .....	54
5.8.1 Service .....	31	5.21 MF07 and MF10 Travelling motor .....	55
5.8.2 Assembly .....	31	5.21.1 Removing DC-brake and inspection of brake friction disc.....	55
5.9 Hoisting motor and brake.....	32	5.21.2 Dismounting the travelling motor .....	56



R&M Materials Handling, Inc.  
4501 Gateway Boulevard  
Springfield, Ohio 45502  
P.: (937) 328-5100  
FAX: (937) 325-5319

5.22	Inverter for travel.....	56	6.6.2	Curved beam .....	115
5.23	Rope drum .....	58	6.6.3	Outfitting the hoist.....	116
5.23.1	Service, drum size $\phi$ 243/303/355/406 mm .....	58	6.7	Installing the hoist, fixed trolley .....	116
5.23.2	Service, drum size $\phi$ 608 mm .....	59	6.7.1	Outfitting the hoist.....	117
5.23.3	Drum wear inspection .....	59	6.8	Installing the hoist, machinery hoist .....	117
5.24	Rope guide .....	61	6.8.1	Outfitting the hoist.....	117
5.25	Rope clamps.....	68	6.9	Connecting to the mains network.....	118
5.25.1	Service .....	68	<b>7 Commissioning.....</b>	<b>119</b>	
5.26	Drum Brake.....	68	7.1	Inspections without load.....	119
5.26.1	Holding Brake .....	69	7.1.1	Inspecting the connections of electrical equipment.....	119
5.26.2	Service .....	69	7.1.2	Inspection of pushbutton controller and directions of rotation.....	119
5.26.3	Adjusting holding brake .....	70	7.1.3	Checking operating sound.....	119
5.26.4	Overspeed Brake.....	70	7.1.4	Inspection and adjustment of the hoisting limit switch.....	119
5.26.5	Service .....	71	7.1.5	Inspection and adjustment of the limit switch for travel (not in all models).....	120
5.26.6	Adjusting overspeed brake .....	74	7.1.6	Inspection of hook and operation of rope sheaves.....	120
5.27	Sheave support and rope anchorage support 76		7.1.7	Inspection of rope.....	120
5.27.1	Service (R2 and R4 reevings).....	76	7.1.8	Inspection of overload protection.....	120
5.28	Rope anchorage .....	76	7.1.9	Inspection of trolley.....	120
5.28.1	Service .....	77	7.1.10	Inspection of brake operation.....	120
5.28.2	Assembly .....	78	7.2	Inspections with test-load, 100% of the rated load of the hoist.....	120
5.29	Hook-block, rope reeving and return sheaves.....	80	7.2.1	Inspection of motor current.....	120
5.29.1	Service .....	87	7.2.2	Inspection of running temperature.....	121
5.29.2	Hook block assembly.....	88	7.2.3	Inspection of travelling machinery.....	121
5.29.3	Return sheave assembly .....	92	7.3	Inspections with overload, 110...125% of the rated load of the hoist.....	121
5.30	Wire rope .....	94	7.3.1	Inspection of overload protection.....	121
5.30.1	Wire rope structure .....	94	7.3.2	Inspection of brake operation.....	121
5.30.2	Service .....	95	7.3.3	Inspection of rope .....	121
5.30.3	Assembly .....	98	7.4	After the inspections.....	121
5.31	Overload protection .....	99	7.4.1	Cleaning.....	121
5.31.1	Service .....	100	7.4.2	User training.....	121
5.32	Condition monitoring unit.....	101	7.4.3	Hand-over documents .....	121
5.32.1	Service .....	102	<b>8 Maintenance .....</b>	<b>122</b>	
5.33	Load signal amplifier.....	103	8.1	Daily inspections .....	122
5.33.1	Adjustment.....	103	8.2	Periodical inspections and servicing .....	123
<b>6 Installation .....</b>	<b>105</b>		8.3	Calculation of Safe Working Period (SWP) 124	
6.1	Prior to installation .....	105	8.3.1	STEP 1: Operating hours per inspection interval, $T_i$ .....	125
6.2	Low headroom trolley, drum size $\phi$ 243 mm 106		8.3.2	STEP 2: Actual load spectrum factor per inspection interval, $K_{mi}$ .....	125
6.3	Low headroom trolley .....	107	8.3.3	STEP 3: Partial duration of service, $S_i$ [hours] 125	
6.3.1	Outfitting the hoist.....	108	8.3.4	STEP 4: Actual duration of service, $S$ [hours] 125	
6.4	Double-girder trolley .....	109	8.3.5	STEP 5: SWP% and remaining service life .126	
6.4.1	Outfitting the hoist.....	109			
6.5	Normal headroom trolley .....	110			
6.5.1	Straight beam.....	110			
6.5.2	Curved beam, when two trolleys.....	111			
6.5.3	Outfitting the hoist.....	112			
6.6	Normal headroom trolley, drum diameter 608 mm .....	113			
6.6.1	Straight beam.....	113			



R&M Materials Handling, Inc.  
4501 Gateway Boulevard  
Springfield, Ohio 45502  
P.: (937) 328-5100  
FAX: (937) 325-5319

8.4	General Overhaul, GO.....	126	9.2.1	Lubricant volumes, hoisting gears .....	129
8.5	Recommended tightening torques.....	126	9.2.2	Lubricant volumes, travelling gears .....	129
<b>9</b>	<b>Lubricants .....</b>	<b>128</b>	9.2.3	Lubricant volumes, drum rim gear .....	129
9.1	Lubricant types .....	128	<b>10</b>	<b>Troubleshooting .....</b>	<b>130</b>
9.2	Lubricant quantities.....	129			