



R&M Materials Handling, Inc.
4501 Gateway Boulevard
Springfield, Ohio 45502
P.: (937) 328-5100
FAX: (937) 325-5319

2 Introduction

2.1 Instructions

The instructions for safe and effective installation, operation and maintenance of the hoist are included in the hoist delivery. The hoist itself is also provided with labels and markings. The instructions are issued on paper and/or on CD-ROM. The instructions for using digital CD-ROMs are printed on the packaging. Read the instructions supplied with the hoist before installation and commissioning.



Keep the instructions in a safe place for future reference.

2.2 Symbols

The following symbols are used in the instructions:



Warning!



Caution