



R&M Materials Handling, Inc.
 4501 Gateway Boulevard
 Springfield, Ohio 45502
 P.: (937) 328-5100
 FAX: (937) 325-5319

4 Hoist manufacturer

4.1 Hoist identification data

The type marking and serial number of the hoist are shown on the rating plate attached to the hoist and in the inspection records supplied with the hoist.



Always state the serial number of the hoist when ordering spare parts or service.

4.2 Directives and standards

The hoist and hoist components meet the requirements of the relevant FEM standard. The hoist complies with the European legislation and harmonized standards currently in force.

The hoist and hoist components meet the requirements of the following European Community directives:

- EC Directive on the safety of machinery 98/37/EC
- EC Low voltage directive 73/23/EC
- EC EMC directive 89/336/EC

The following harmonized standards have been applied to the product:

- EN 292 -1, Safety of machinery. Basic concepts and general principles for design. Part 1: Basic concepts and methods
- EN 292 -2, Basic concepts and general principles for design. Part 2: Technical principles and specifications
- EN 1050, Safety of machinery. Principles for risk assessment
- EN 60204-32, Safety of machinery. Electrical equipment for machinery. Part 1: General requirements

The quality standard applied by the manufacturer is:

- EN 29001/ISO9001, Quality Systems

The following international technical standards have been applied to the product:

- FEM 1.001 Section 4; Rules for the design of hoisting appliances, Checking for fatigue and choice of mechanism components
- FEM 9.901 Design of serial lifting equipment

4.3 Manufacturer's contact details (R&M)

Contact details for the manufacturer of the hoist:

Manufacturer's name and address

R&M Materials Handling, Inc

4501 Gateway Boulevard
 Springfield, OH 45502
 USA

Telephone number:

+1 937 328 5100

Fax number:

+1 937 325 5319

For further information about the product, operational training and servicing, please contact the manufacturer's representative located closest to you.



R&M Materials Handling, Inc.
4501 Gateway Boulevard
Springfield, Ohio 45502
P.: (937) 328-5100
FAX: (937) 325-5319

4.3.1 Spare parts

Spare parts for the hoist are specified in the separate spare parts catalogue delivered with the hoist. Always state the serial number marked on the rating plate of the hoist when ordering spare parts. Always use genuine spare parts and lubricants approved by the manufacturer of the hoist. R&M reserves the right to revoke warranty terms when non original parts are used.