

Pushbutton Station

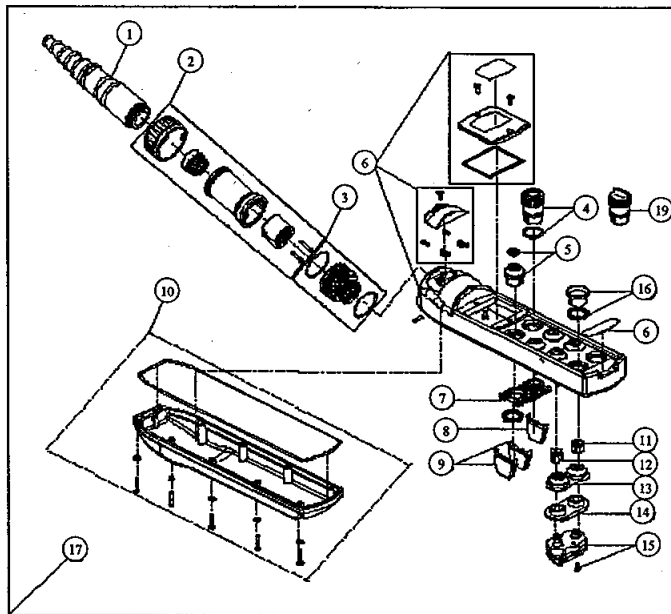


Figure-??

Pushbutton Station

Item	Part Number	Stock Number	Description	Qty
1	3000001142	52299990	Cable Sleeve	1
2	3000001143	52299976	Pendant Plug	1
3a	3000001144	52299971	Wired Plug for 6 Button, 2 Speed Motion, Pendant	1
3b	3000001145	52299972	Wired Plug for 8 Button, 2 Speed Motion, Pendant	1
3c	3000001146	52299975	Wired Plug for 12 Button, 2 Speed Motion +Select, Pendant	1
4	3000001147	52292954	Emergency Stop Button	1
5	3000001148	52292949	On/Horn Button	1
6a	3000001149	52299970	8 Hole Pendant Upper Cover	1
6b	3000001150	52299974	12 Hole Pendant Upper Cover	1
7	3000001151	52299987	Contact Block Mounting Plate (3 Contact Blocks per Button)	2
8	3000001152	52292951	NC Contact Block	1
9	3000001153	52292950	NO Contact Block	2
10a	3000001154	52299969	8 Hole Pendant Back	1
10b	3000001155	52299973	12 Hole Pendant Back	1
11	3000001156	52299962	Button, Arrow Black D	2
12	3000001157	52299964	Button, Arrow White D	2
13	3000001158	52299959	Button, Rubber Double	1
14	3000001159	52299960	Button Plate, Double	3
15	3000001160	52292952	Contact Block, 2 Step 2 Direction	1
16	3000001161	52299989	Blanking Plug	2
17	3000001164	52292948	Complete Pendant Assembly (6 Button)	1
17b	3000001162	52292946	Complete Pendant Assembly (8 Button)	1
17c	3000001163	52292947	Complete Pendant Assembly (12 Button)	1
19	3000001166	52292955	3 Position Selector Switch	1

ON-HORN Complete Assembly Consists of Items: 5, 7 & 9

E-STOP Complete Assembly Consists of Items: 4, 7 & 8